BIGAIR Sportz:Com Aerodynamic design without limitations


For Linesets Built by PD Only!

Lineset Assembly Instructions


"A" and "C" lines:

Rounded loops go to the canopy, flattened loops with fold-marks go to the connector link. "B" and "D" marks are closer to the canopy.

Note Regarding the Upper Steering Lines: From cascade to canopy, line 3 is the shortest, lines 2 & 4 are longer, and lines 1 & 5 are the longest (see figure at right).

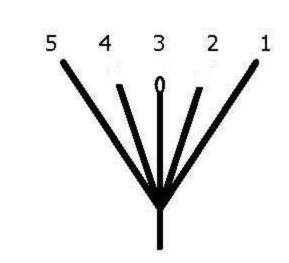

Samurai

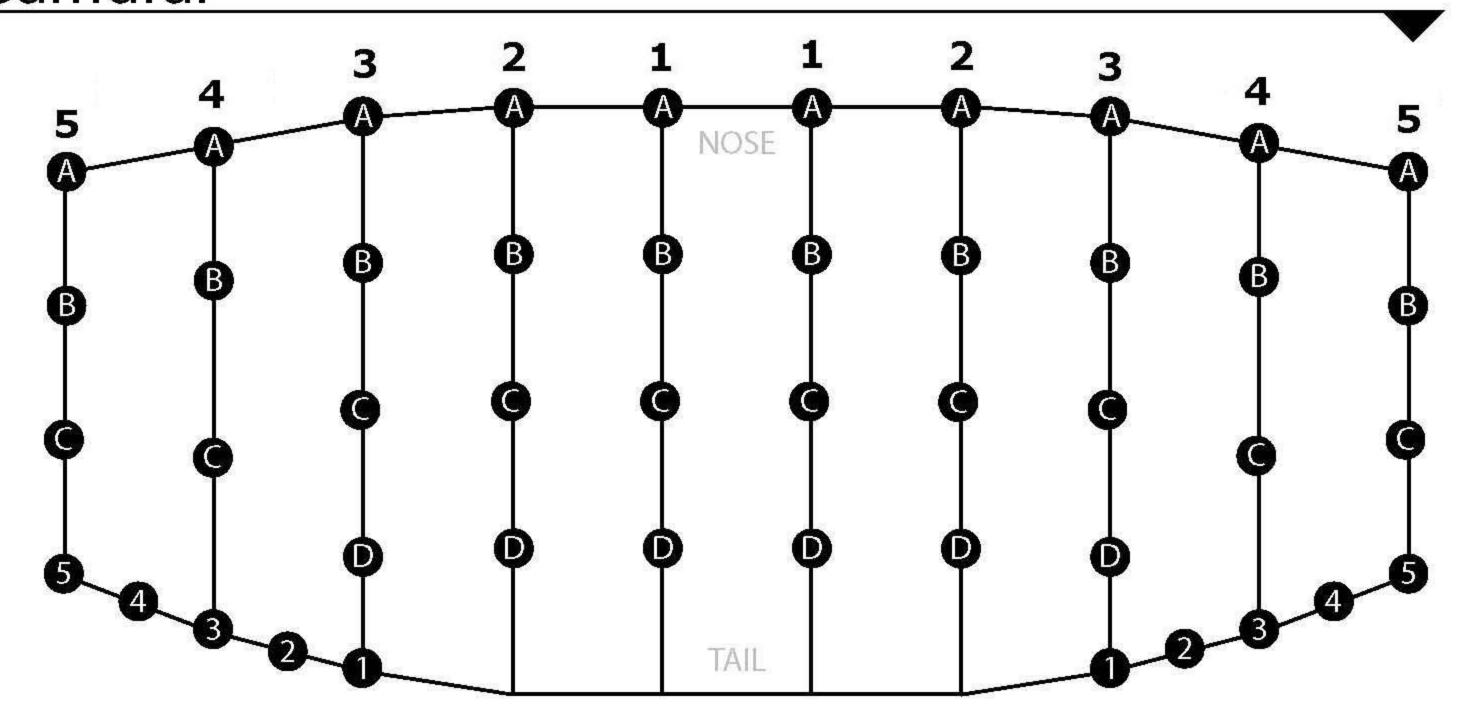

Lotus

